


MODEL 117, 166, 172, 176, 197, 207, 212, 218, 222, 231, 246  
 MODEL 204  
 with CODE 442 (Luxury multifunction steering wheel)

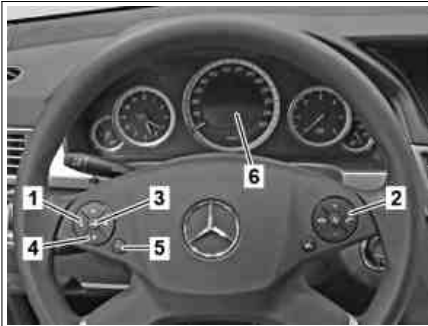

P54.33-3472-01



P54.33-3473-01



P54.33-3474-01

Shown on model 212.002, valid for model 197, 204 with CODE 442, 207, 212

- 1 System selection button
- 2 Accept/terminate phone call button
- 3 OK button
- 4 Scroll forward/back button
- 5 "Back" and voice control system OFF button
- 6 Multifunction display

Shown on model 172, valid for model 117, 166, 172, 176, 218, 231, 242, 246

- 1 System selection button
- 2 Accept/terminate phone call button
- 3 OK button
- 4 Scroll forward/back button
- 5 "Back" and voice control system OFF button
- 6 Multifunction display

Shown on model 222

- 1 System selection button
- 2 Accept/terminate phone call button
- 3 OK button
- 4 Scroll forward/back button
- 5 "Back" and voice control system OFF button
- 6 Multifunction display

	Dialing		
1	Close engine hood, doors and trunk lid or liftgate		
2	Turn transmitter key in electronic ignition lock control unit to position "1"	<b>i</b> The standard display (total distance) must appear in the multifunction display (6); if necessary, repeatedly press the scroll forward/back button (4).	
3	Repeatedly press system selection button (1) until menu item "Trip" is highlighted in multifunction display (6)	<b>i</b> "Trip" remains selected for approx. 5 s. Operation step 4 must be carried out within this time.	
4	First press and hold down accept and end phone call button (2), then within 1 s also press OK button (3) and hold down for approx. 5 s	<b>i</b> The workshop menu with the following tabs appears in the multifunction display (6): Vehicle data Dynamometer test "Change brake lining" (depending on equipment installed) "ASSYST-PLUS"	
	<b>Deactivation</b>		
5	Press "Back" and VCS OFF button (5) repeatedly until standard display (total distance) appears in multifunction display (6)		
6	Turn transmitter key in electronic ignition lock control unit to position "0"		