

Model 207, 212 (except 212.074/075/076/077/092/274/275/276/277/292)

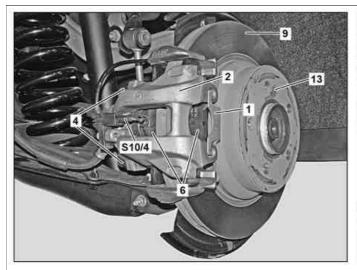


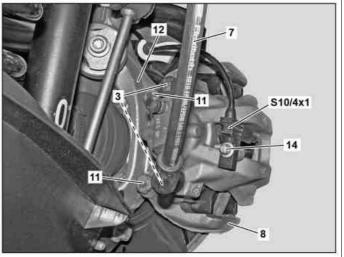

P42.10-2761-08

1	Spring	6	Brake linings	S10/4	Right rear brake wear sensor
2	Brake caliper	7	Brake hose	S10/4x1	Right rear brake wear sensor electrical connector
3	Caps	8	Caliper support		
4	Boots	9	Brake disk		

- 01 Pusher tool2 Brake caliper
- 5 Guide pin

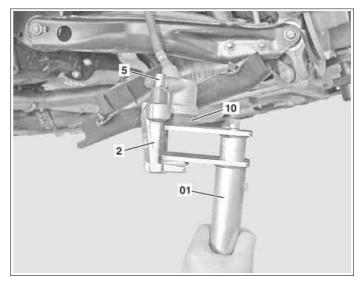

P42.10-2617-11


⚠ Warning	Risk of injury. Skin or eye injuries may result when handling hot or glowing objects.	Wear protective gloves, protective clothing and safety glasses, if necessary.	AS00.00-Z-0002-01A
⚠ Caution	Risk of poisoning from swallowing brake fluid. Risk of injury from skin and eye contact with brake fluid	Only pour brake fluid into suitable and appropriately marked containers. Wear protective clothing and eye protection when handling brake fluid.	AS42.50-Z-0001-01A
	Notes on repairs to brake system		AH42.00-P-0003-01A
	Brake fluid notes		AH42.50-P-0001-01A
₽	Clean		
1	Clean the area around the cap of the brake fluid reservoir	Assembly cleaner	*BR00.45-Z-1028-04A
XX	Remove/install		

2	Unscrew cap of brake fluid reservoir and extract some brake fluid	i This prevents the brake fluid reservoir overflowing when the brake piston is pushed back.	
3	Remove corresponding rear wheel		
⊯AP ⊯AP		Model 207 Model 212 (except 212.074/075/076/077/092/274/275/276/277/29 2)	AP40.10-P-4050CW AP40.10-P-4050EW
4	Detach spring (1) from brake caliper (2)		
5	Disconnect electrical connector of right rear brake wear sensor (S10/4x1) Notes on installing brake wear indicator contact sensors		AH42.10-P-0003-01CW
6	Pry cap (3) off upper boot (4) and remove	Only fitted on the right-hand side.	
7	Unscrew guide pins (5)	Mm Guide pin to brake caliper support or bolt for guide pin to brake caliper	*BA42.10-P-1004-12J
8	Remove brake caliper (2) from brake caliper support (8)	Do not tension or kink brake hose (7). To relieve the load on the brake hose (7), secure the brake caliper (2) to the vehicle free of tension. Otherwise, the brake hose (7) will be	
9	Remove brakepads (6)	damaged. i Installation: Insert the inner brake lining (6) with riveted-on spring into the brake piston. Push outer brakepad (6) into brake caliper support (8) and attach brake caliper (2).	
		i Only sets of brakepads (6) approved by Mercedes-Benz may be installed. i Installation: Do not apply brake paste or lubricants to the brakepads (6) and brake calipers (2)!	
		i Brakepads (6) must be disposed of as special waste. The local authorities can provide information regarding whether disposal is also permitted as industrial waste similar to domestic waste.	
10	Press back brake piston using pusher tool (01		*000589524300
		Replace brake caliper (2).	AR42.10-P-0080EW
11	Pull right rear brake wear sensor (S10/4) out of backing plate of brakepads (6)	When replacing the brakepads (6) or the right rear brake wear sensor (S10/4). i Installation: Replace defective right rear	
		brake lining wear sensor (S10/4).	
4	Check		
12	Check brakepads (6) for condition and wear		
⊯ÃP ⊯ÃP		Model 207 Model 212 (except 212.074/075/076/077/092/274/275/276/277/29 2)	AP42.10-P-4252CA AP42.10-P-4252EW
		In event of damage or excessive wear Install new brake disks (9).	
		i Only sets of brake disks (9) approved by Mercedes-Benz may be installed.	AR42.10-P-0240EW
13	Check brake disk (9) for wear and that it is in	_	
⊯ AP	good condition	Model 207 Model 212 (except	AP42.10-P-4258EW
		212.074/075/076/077/092/274/275/276/277/29 2) except code B07 (Ceramic brake system) In event of damage or excessive wear Install new brake disks (9). i Only sets of brake disks (9) approved by Mercedes-Benz may be installed.	AR42.10-P-0240EW
14	Check brake caliper (2) for leaks and dust boo (10) for damage	ILL Replace brake caliper (2) if necessary.	

15	Check spring (1) for deformation	i Replace spring (1) if necessary.	
TŽ.	Clean		
16	Clean contact surfaces of brakepads (6) on brake caliper (2)	Do not use sharp-edged or pointed objects. Otherwise the brake caliper (2) or the dust boots of the brake pistons could be damaged.	
		Assembly cleaner	*BR00.45-Z-1028-04A
17	Install in the reverse order		
	Risk of accident when commissioning the vehicle due to a lack of braking effect when the service brake is operated for the first time after repair work.	Before starting the engine, actuate brake pedal several times until pressure is built up and maintained in the brake system.	AS42.50-Z-0002-01A
18	Depress brake pedal several times until brake linings (6) make contact with brake disks (9)	i Firm resistance should be noticeable at the brake pedal.	2
4	Check		
19	Check and correct fluid level in brake fluid expansion reservoir		
₩FAP			AP42.10-P-4210EW
	Risk of death caused by limbs being caught or crushed by rotating parts when performing tests on the brake test stand	Never leave the vehicle unattended on the rollers except in an emergency. Ensure that no one is under the vehicle or near rotating parts during testing. In case of emergency, use the EMERGENCY OFF switch to shut down test stand.	AS42.00-Z-0001-01A
20	Carry out brake test on the test stand		
FAP			AP42.00-P-4290BA

Nm Rear axle brake caliper

Number	Designation	Model 207	Model 212
BA42.10-P-1004-12J	Guide pin to brake caliper support or bolt for guide pin to brake caliperNm	25	25

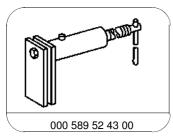

Resetting device

Repair materials

Number	Designation	Order number
BR00.45-Z-1028-04A	Assembly cleaner	Adolf Würth GmbH & Co. KG Reinhold-Würth-Str. 12-17 74653 Künzelsau-Gaisbach Germany Tel. +49 7940 15-0 Fax +49 7940 15-1000 http://www.wuerth.de