AP00.20-P-0042MCU		Reset service indicator
MODEL	451.3 /4	

A1 Instrument cluster



P00.20-2610-01

30.10.08

	Resetting		
1	Switch on ignition		
2	Select service indicator in the multifunction display on the instrument cluster (A1)	i Press button (1) on the instrument cluster (A1) twice within the first 4 seconds.	
3	Switch off the ignition within approx. 10 s		
4	Press button (1) on the instrument cluster (A1)		
5	Switch on ignition and keep button (1) on the instrument cluster (A1) pressed further		
6	Wait until the service indicator flashes and then jumps back to "0"	i The service indicator is reset.	
7	Release button (1) and after this switch off the ignition		