


MODEL 204.0 /2 /3 /9


with comfort multifunction steering wheel (12 buttons)


Shows model 204.041

- A1p13 Multifunction display
- S110s1 Scroll forward/back button (scroll forward button)
- S110s3 System selection button
- S110s4 "Back" and voice control system OFF button ("Back" button)
- S110s6 Press OK n/
- S111s3 Accept/terminate phone call button (Accept phone call button)

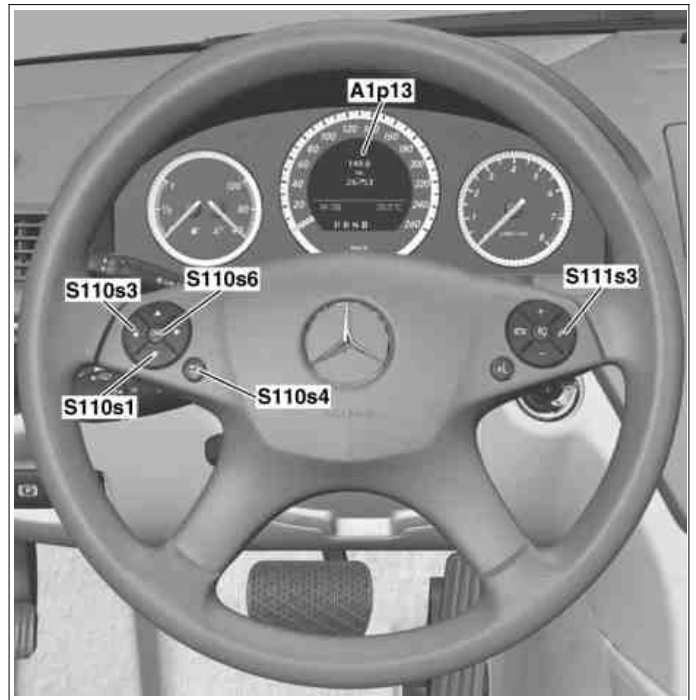

P54.30-9550-12

		Adjust		
1		Close trunk lid or liftgate as well as engine hood and doors		
2		Turn key in ignition switch to position "1"	<i>i</i> The standard display (kilometer counter) must appear in the multifunction display (A1p13), if necessary press the scroll forward button repeatedly (S110s1).	
3		Press the system selection button (S110s3) repeatedly until the menu item "trip" with highlighter is stored in the multifunction display (A1p13)	<i>i</i> "Trip" remains selected for approx. 5 s. Operation step 4 must be carried out within this time.	
4		<b>First press the</b> Accept phone call button (S111s3) and keep pressed, then in addition press and keep pressed the OK button within 1 s. n/ (S110s6) and hold.	<i>i</i> Keep both buttons (S111s3, S110s6) pressed for approx. 5 s: The workshop menu with the tabs "Vehicle data", "Dynamometer test" and "ASSYST PLUS" appears in the multifunction display (A1p13).	
5		Press scroll forwards button (S110s1) repeatedly until "ASSYST PLUS" is highlighted and confirm selection with OK button (S110s6)	<i>i</i> The indexes "Service data" and "Full service" (A1p13) appear in the multifunction display.	
6		Press scroll forwards button (S110s1) to highlight "Full Service" and then confirm the selection with the OK button (S110s6)	<i>i</i> The current service items appear in the multifunction display (A1p13).	
7		Press scroll forwards button (S110s1) repeatedly until "Confirm Service" is highlighted and confirm selection with the OK n/ (S110s6)	<i>i</i> The oil selection or "Service carried out?" appears in the multifunction display (A1p13).	
8		Select specification for engine oil used with scroll forwards button (S110s1) and confirm selection with the OK button (S110s6)  Service information: Introduction of oil selection in instrument cluster	Vehicles with spark ignition engine and oil selection  <i>i</i> To reach the maximum kilometer interval of 25,000 km/1 year, engine oil as per the Specifications for Operating Fluids, Sheet 229.5 must be used and confirmed! Model 204 with engine 271, 272 and vehicle identification number (VIN) A as of 184624, model 204 with engine 271, 272 and VIN F as of 198708, model 204 with engine 271, 272 and VIN R as of 039071	SI00.20-P-0032A
9		Press scroll forwards button (S110s1) until "Yes" is highlighted and confirm selection with OK n/ (S110s6)	<i>i</i> "No take-back possible" appears in the multifunction display (A1p13).	

10	Press scroll forwards button (S110s1) until "Confirmation" is highlighted and confirm selection with OK n/ (S110s6)	 "Full service carried out" appears in the multifunction display (A1p13).	
11	Press OK n/ (S110s6) and "Back" button (S110s4) repeatedly until the standard display (kilometer counter) appears in the multifunction display (A1p13)		
12	Turn key in ignition lock to position "0"		